



INSTALL GUIDE

IDS1-IDS(RS)-BM1-[CMBMXA0]-EN

DOCUMENT NUMBER
64342

REVISION DATE
20190703

FIRMWARE
IDS1-IDS(RS)-BM1-[CMBMXA0]

HARDWARE
CMBMXA0

ACCESSORIES
ADS-USB (REQUIRED)
COMPATIBLE RF-KIT (OPTIONAL)
DRONE, EORBIT, MYCAR, MYSTART (OPTIONAL)



TERMS OF USE: Automotive Data Solutions Inc. ("ADS") products are strictly intended for installation by Certified Technicians who are employed by a registered business specialized in the installation of automotive aftermarket electronics products. Prior to beginning installation of an ADS product in a vehicle, it is the Certified Technician's responsibility to review the most current Product Guide, Install Guide and vehicle-specific notes available in Weblink®. ADS is not responsible for any damages whatsoever, including but not limited to any consequential damages, incidental damages, damages for loss of time, loss of earnings, loss of profit, commercial loss, loss of economic opportunity and the like that may or may not have resulted from the use, misuse, improper installation or operation of its products. ADS reserves itself the right to suspend any Weblink® account without notice and decline to offer technical support to non-Certified Technicians, non-compliant Certified Technicians or end users.



BEFORE INSTALLATION

- 1- Connect module to computer
- 2- Login to Weblink account
- 3- Flash firmware to module (module is not preloaded with firmware)
- 4- Use accessories accordingly (accessories are sold separately)


BOX CONTENTS

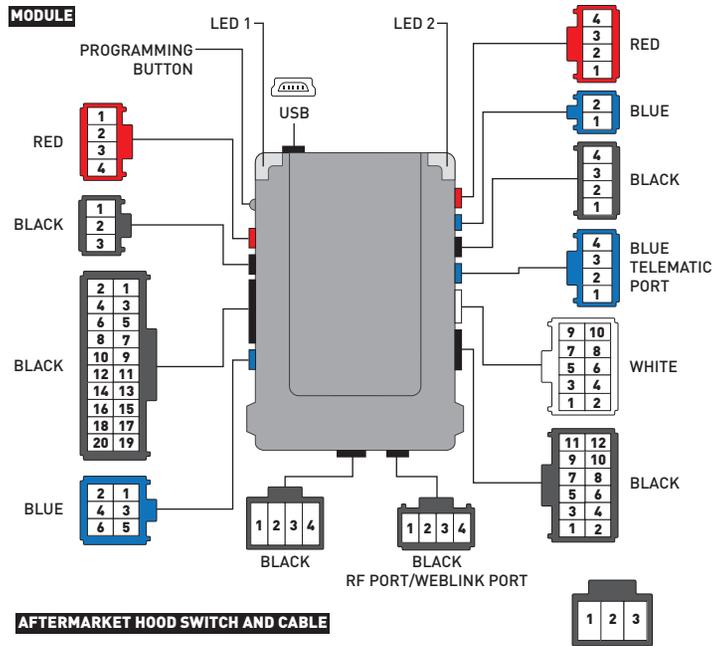


WARNING STICKER




T-HARNESS 1 (Accessories sold separately)

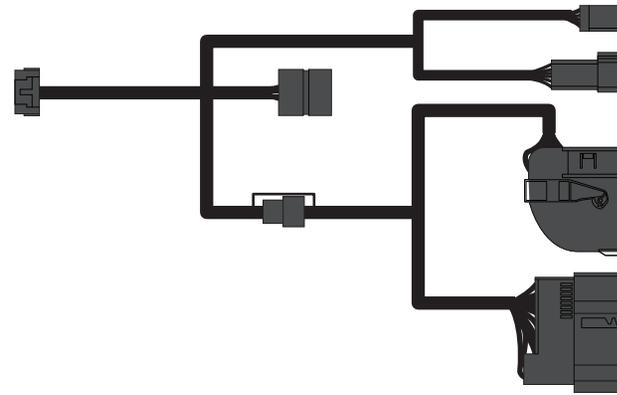

T-HARNESS 2

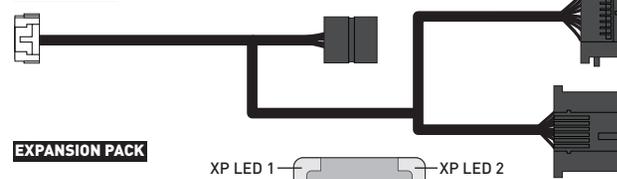


EXPANSION PACK

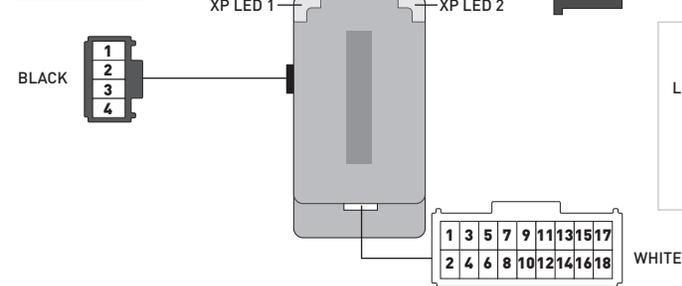

10 PIN WHITE CONNECTOR



12 PIN BLACK CONNECTOR



EXPANSION CABLE




18 PIN WHITE CONNECTOR - ADAPTER CABLE


THE ADS-HRNBW01-2 CABLE IS INCLUDED IN KITS MANUFACTURED AFTER 11/12/2013. CONTACT YOUR AUTHORIZED DEALER, IF THIS CABLE IS NOT INCLUDED.



EXPANSION PACK ASSEMBLY

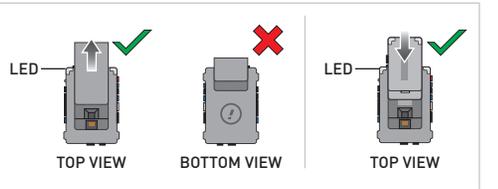


WEBLINK CABLE (required accessory sold separately)

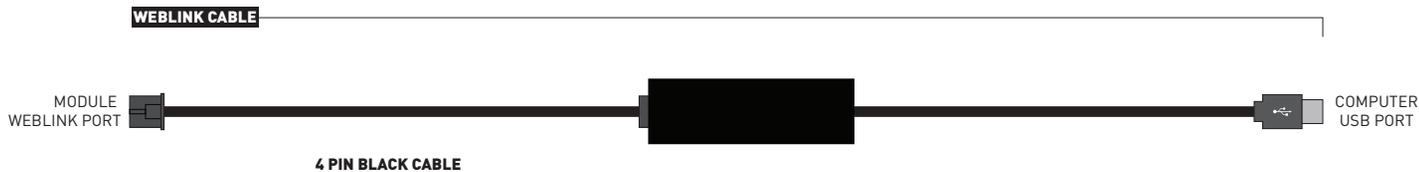


RF KIT (accessories sold separately)



TELEMATIC KIT (accessory sold separately)

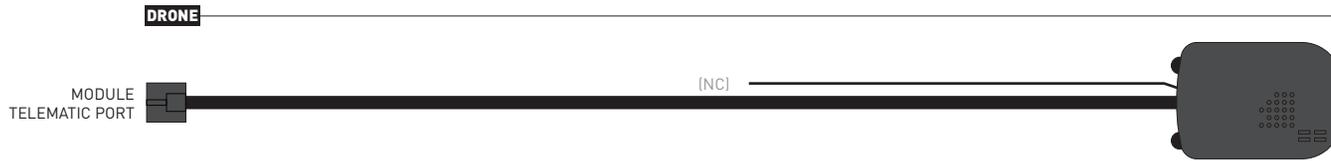


TELEMATIC KIT (accessories sold separately)

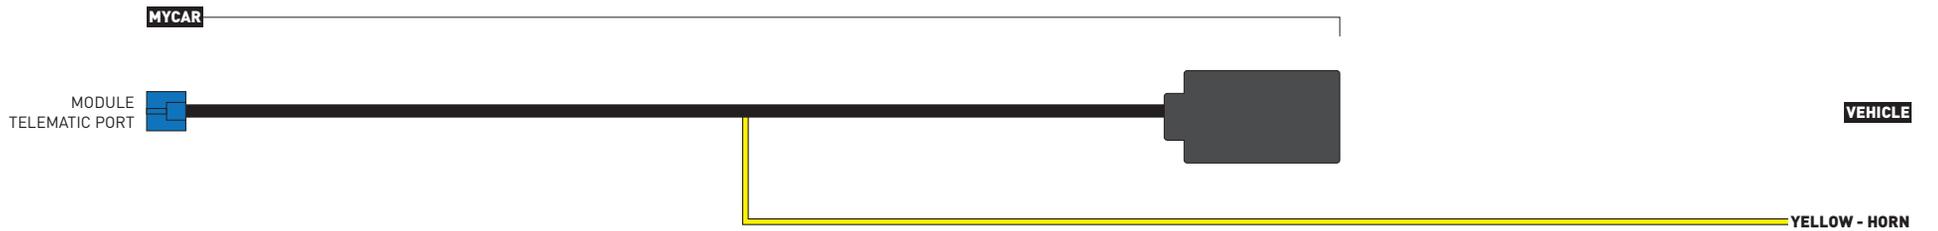

TELEMATIC KIT (accessories sold separately)



IMPORTANT

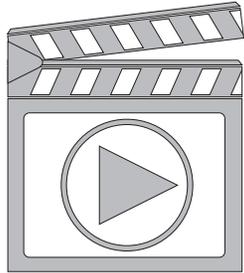

INSTALL VIDEO GALLERY AVAILABLE ONLINE

Before installing this product, consult our Install Video Gallery and watch:

- Vehicle Disassembly Procedure videos
- Module Connection Procedures videos
- Module Programming Procedures videos

To access the videos, simply log in your Weblink user account,

Welcome to Weblink! Log in or Register



and click on "Install videos" under the "Support" tab.



Then, select a vehicle make, year and model to display the available videos.

01  START vehicle. Verify all vehicle functionalities. If the vehicle displays error messages or any malfunction: stop the installation and service the vehicle.

02  Turn ignition to OFF position. Remove keyfob from keyport.

03  Verify all keyfob functionalities (Door Lock, Door Unlock, Trunk Release and Comfort Access System if equipped).

04  Insert the expansion pack into module.

05  Connect the module to the computer with the WEBLINK cable. Flash the module with the latest firmware then flash the expansion pack.


06  Connect and secure every connector to the vehicle, as shown in STEP 1 of the WIRING DIAGRAM.

07  **WARNING:** Any vehicle harness that is disconnected during installation, must be re-connected before performing any system tests. Failure to comply will result in vehicle displaying error messages. An OEM scantool will be required to clear the error messages.

08  START vehicle. Verify all vehicle functionalities.


09  **WARNING:** If the vehicle displays error messages or any malfunction, stop the installation, verify every connection and if the problem persists, call technical support.

10  Turn ignition to OFF position. Remove keyfob from keyport.

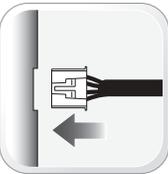11  Connect and secure every connector to the module, as shown in STEP 2 of the WIRING DIAGRAM.

12  If the module has (1) red connector, connect the jumper cable as shown in the NOTE of the WIRING DIAGRAM. If the module has (2) red connectors, do not connect the jumper cable.

13  If required, connect an accessory as shown in the COMPATIBLE ACCESSORIES section of the guide.

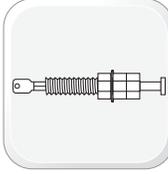14  If the vehicle is not equipped with a factory hood switch, install an aftermarket hood switch as shown in STEP 3 of the WIRING DIAGRAM.

15  Put sticker 1 on a clean and visible surface in the engine bay and put sticker 2 under the dashboard near the OBDII connector.

16  Module installation procedure completed.

WARNING

1-TO CONNECT THE MODULE: FOLLOW STEPS 1 TO 3
2-TO DISCONNECT THE MODULE: FOLLOW STEPS 3 TO 1

STEP 2

CONNECT TO MODULE

BLACK 20 PIN

WHITE 18 PIN

WARNING: THE ADAPTER CABLE IS NOT REQUIRED

NOTE

IF THE MODULE HAS (1) RED CONNECTOR:
CONNECT THE JUMPER CABLE.
IF THE MODULE HAS (2) RED CONNECTORS:
DO NOT CONNECT THE JUMPER CABLE.

MODULE


BLACK 4 PIN

BLACK 6 PIN

STEP 1


CONNECT THE FOLLOWING TO THE VEHICLE
START THE VEHICLE WITH THE OEM KEYFOB
TO TEST THE CONNECTIONS

BRAKE SWITCH

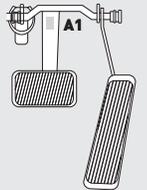

BRAKE HARNESS

COMFORT ACCESS SYSTEM MODULE



MINI: BEHIND INSTRUMENT PANEL, DRIVER SIDE
BMW: UNDER DASH, DRIVER SIDE

B1 CONNECTOR

B2 HARNESS

C1 CONNECTOR

C2 HARNESS

WARNING:
THESE CONNECTORS
HAVE TWO [2X] LOCKING
MECHANISMS.
INSERT THE CONNECTOR
IN ITS HOUSING AND
APPLY GENTLE PRESSURE
ON BOTH EXTREMITIES
TO SECURE THE
CONNECTION. (TWO AUDIBLE
CLICKS WILL BE HEARD.)

STEP 3


CONNECT IF REQUIRED

WHITE 10 PIN

07 GRAY/WHITE - HOOD STATUS (-) INPUT
08 GRAY/BLACK (NOT USED)

IF NOT EQUIPPED
WITH AN OEM HOOD SWITCH,
INSTALL AN AFTERMARKET HOOD SWITCH

HOOD SWITCH



MAKE	MODEL	YEAR	WIRE DESCRIPTION	CONNECTOR NAME	CONNECTOR COLOR	CONNECTOR TYPE	POSITION	WIRE COLOR	POLARITY	MODULE LOCATION	COMPONENT LOCATOR
MINI	Countryman / ALL-4 PTS AT	11-15	12V	X14261	~	51 pin	02	Red/Yellow	(+)	Driver kick panel	~
			Ground	X14261	~	51 pin	47	Brown or Brown/Black	(-)	Driver kick panel	~
			CanH	X14261	~	51 pin	46	Orange/Green	(DATA)	Driver kick panel	~
			CanL	X14261	~	51 pin	45	Green	(DATA)	Driver kick panel	~
	Paceman PTS AT	13-15	12V	X14261	~	51 pin	02	Red/Yellow	(+)	Driver kick panel	~
			Ground	X14261	~	51 pin	47	Brown or Brown/Black	(-)	Driver kick panel	~
			CanH	X14261	~	51 pin	46	Orange/Green	(DATA)	Driver kick panel	~
			CanL	X14261	~	51 pin	45	Green	(DATA)	Driver kick panel	~

WARNING

1-TO CONNECT THE MODULE: FOLLOW STEPS 1 TO 3
2-TO DISCONNECT THE MODULE: FOLLOW STEPS 3 TO 1

STEP 2

CONNECT TO MODULE

BLACK 20 PIN

WHITE 18 PIN

WHITE 18 PIN

ADAPTER CABLE

NOTE

IF THE MODULE HAS (1) RED CONNECTOR:
CONNECT THE JUMPER CABLE.
IF THE MODULE HAS (2) RED CONNECTORS:
DO NOT CONNECT THE JUMPER CABLE.

MODULE

BLACK 4 PIN

BLACK 6 PIN

STEP 1

CONNECT THE FOLLOWING TO THE VEHICLE
START THE VEHICLE WITH THE OEM KEYFOB
TO TEST THE CONNECTIONS

CUT AND REMOVE CONNECTORS
FROM T-HARNESS

5 AMPS

RED - 12V (+) - 02
BLACK - GROUND - 47
PINK (NOT USED)
PINK/RED - CANH - 46
PINK/YELLOW - CANL - 45
BLACK - GROUND - 47

CONNECT
IF WIRE
IS PRESENT




X14261

33	27	7
34	28	8
35	29	9
36	30	10
37	31	11
38	32	12
39	20	13
40	21	14
41	22	15
42	23	16
43	24	17
44	25	18
45	26	19


DRIVER KICK PANEL

BRAKE SWITCH

BRAKE HARNESS

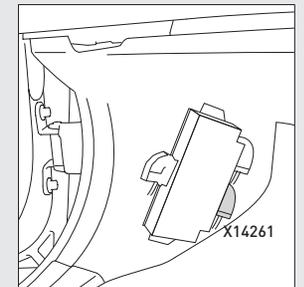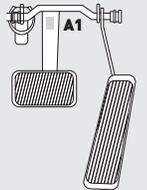

KEYPORT CONNECTOR



KEYPORT HARNESS

WARNING:
THESE CONNECTORS
HAVE TWO [2X] LOCKING
MECHANISMS.
INSERT THE CONNECTOR
IN ITS HOUSING AND
APPLY GENTLE PRESSURE
ON BOTH EXTREMITIES
TO SECURE THE
CONNECTION. (TWO AUDIBLE
CLICKS WILL BE HEARD.)

STEP 3


CONNECT IF REQUIRED

WHITE 10 PIN

07 GRAY/WHITE - HOOD STATUS (-) INPUT
08 GRAY/BLACK (NOT USED)

IF NOT EQUIPPED
WITH AN OEM HOOD SWITCH,
INSTALL AN AFTERMARKET HOOD SWITCH

HOOD SWITCH



01 LED 1 is solid RED. Insert keyfob 1 into keyport.



02 Within 10 seconds, LED 1 will flash GREEN once (1x).



03 Remove keyfob 1 from keyport.



04 LED 1 will turn solid RED. Wait 5 seconds.



05 Insert keyfob 1 into keyport.



06 Within 10 seconds, LED 1 will flash GREEN rapidly.



07 Remove keyfob 1 from keyport.



08 WARNING: Disconnect power last. Disconnect module from vehicle.



09 Connect module to computer and proceed with extended programming.



10 WARNING: Do not press module programming button. Connect power first. Connect module to vehicle.



11 LED 1 will turn solid RED.



12 Insert keyfob 1 into keyport.



13 LED 1 will turn solid GREEN for 2 seconds.



14 Remove keyfob 1 from keyport.



15 Module Programming Procedure completed.



>>



NOTE: In Valet Mode, the Remote starter is not functional. Keyless entry, Lock and Unlock will remain functional. See RF kit user manual for alternate valet mode programming.

01



Insert keyfob into keyport.

02



Time restriction. Complete next step within 7 seconds.

03



Cycle ignition ON five times [5x OFF/ON] rapidly. Parking Light will flash once [1x].

04



Wait, Parking Light will flash twice [2x], pause for 1.5 second, then will flash once [1x] to indicate that the valet mode is ON or twice [2x] to indicate that the valet mode is OFF.

05



Turn ignition to STOP position.

06



Remove keyfob from keyport.

07



Valet Mode Programming Procedure completed.

>>



To exit valet mode: repeat steps 1 to 6.

>>  WARNING: Program aftermarket remotes before usage. A maximum of four [4x] aftermarket remotes per system.

01 Insert keyfob into keyport.



02 Time restriction. Complete next step within 7 seconds.



03 Cycle ignition ON five times [5x OFF/ON] rapidly.



04 Parking Light will flash once [1x].



05 Time restriction. Complete next step within 5 seconds from previous step.



06 Press once [1x] on LOCK button of aftermarket remote.



07 Parking Light will flash once [1x].



>> To program additional remotes: repeat steps 5 to 7 using each additional remote.



08 Wait, Parking Light will flash twice [2x].



09 Turn ignition to STOP position.



10 Remove keyfob from keyport.



11 Aftermarket Remote Programming Procedure completed.



>>  It is mandatory to exit the Module Navigation at the end of this procedure. Failure to exit the Module Navigation will drain vehicle battery. To exit the Module Navigation at any time: Follow STEP 13.

>>  Module must be programmed to the vehicle.

>>  Use the Module Navigation Chart on the next page.

01  Set ignition to OFF position.

02  TO ACCESS THE MENUS: Press and hold programming button until LED 1 turns solid GREEN.

03  IN THE MENUS: Press the programming button as many times as the menu number indicates. LED 1 will flash GREEN an equal amount of times continuously.

04  TO ACCESS THE OPTIONS: Press and hold programming button until LED 1 turns solid RED.

05  IN THE OPTIONS: Press the programming button as many times as the option number indicates. LED 1 will flash RED an equal amount of times continuously.

06  TO ACCESS THE SETTINGS: Press and hold programming button until LED 1 turns solid GREEN.

07  LED 1 will flash GREEN as many times as the current (or default) setting number, continuously.

08  IN THE SETTINGS: Press the programming button as many times as necessary to access your setting. LED 1 will flash GREEN an equal amount of times continuously.

09  To return to the MENUS: exit the Module Navigation and redo the Module Navigation Procedure.

10  To save and return to the OPTIONS: Press and hold programming button until LED 1 turns solid RED.

11  LED 1 will flash RED as many times as the current option number continuously.

12  Configure every other setting and proceed to step 13.

13  MANDATORY: EXIT MODULE NAVIGATION. Press and hold programming button for 7 seconds. LED 1 will flash RED rapidly. Release programming button. LED 1 will turn OFF.

14  Module navigation completed.

>>  Failure to exit the Module Navigation will drain vehicle battery.

MODULE NAVIGATION CHART: NOTES	[X] MENUS	[Y] OPTIONS	[Z] SETTINGS														
I Default settings are listed in bold. II Make sure the option is covered on the vehicle before attempting to change the setting.	01 CONFIGURATION	01 DISARM/UNLOCK BEFORE START	<table border="1"> <tr><td>01</td><td>OFF</td></tr> <tr><td>02</td><td>ON</td></tr> </table>	01	OFF	02	ON										
		01	OFF														
		02	ON														
		02 RELOCK AFTER START	<table border="1"> <tr><td>01</td><td>OFF</td></tr> <tr><td>02</td><td>ON</td></tr> </table>	01	OFF	02	ON										
		01	OFF														
		02	ON														
		03 RELOCK AFTER SHUTDOWN	<table border="1"> <tr><td>01</td><td>OFF</td></tr> <tr><td>02</td><td>ON</td></tr> </table>	01	OFF	02	ON										
		01	OFF														
		02	ON														
		04 FORCE UNLOCK ALL ON FIRST PRESS	<table border="1"> <tr><td>01</td><td>OFF</td></tr> <tr><td>02</td><td>ON</td></tr> </table>	01	OFF	02	ON										
		01	OFF														
		02	ON														
		05 TAKEOVER	<table border="1"> <tr><td>01</td><td>ENABLE</td></tr> <tr><td>02</td><td>DISABLE*</td></tr> </table>	01	ENABLE	02	DISABLE*										
		01	ENABLE														
		02	DISABLE*														
		06 SECURE TAKEOVER DELAY	<table border="1"> <tr><td>01</td><td>45 SEC</td></tr> <tr><td>02</td><td>90 SEC</td></tr> <tr><td>03</td><td>03 MIN</td></tr> <tr><td>04</td><td>04 MIN</td></tr> </table>	01	45 SEC	02	90 SEC	03	03 MIN	04	04 MIN						
		01	45 SEC														
		02	90 SEC														
		03	03 MIN														
		04	04 MIN														
07 FACTORY KEYLESS RS SEQUENCE	<table border="1"> <tr><td>01</td><td>DISABLE</td></tr> <tr><td>02</td><td>N/A</td></tr> <tr><td>03</td><td>LOCK + UNLOCK + LOCK</td></tr> <tr><td>04</td><td>LOCK + LOCK + LOCK</td></tr> </table>	01	DISABLE	02	N/A	03	LOCK + UNLOCK + LOCK	04	LOCK + LOCK + LOCK								
01	DISABLE																
02	N/A																
03	LOCK + UNLOCK + LOCK																
04	LOCK + LOCK + LOCK																
08 MODULE RUN TIME	<table border="1"> <tr><td>01</td><td>03 MIN</td></tr> <tr><td>02</td><td>05 MIN</td></tr> <tr><td>03</td><td>10 MIN</td></tr> <tr><td>04</td><td>15 MIN</td></tr> <tr><td>05</td><td>25 MIN</td></tr> <tr><td>06</td><td>30 MIN</td></tr> <tr><td>07</td><td>35 MIN</td></tr> <tr><td>08</td><td>15 MIN</td></tr> </table>	01	03 MIN	02	05 MIN	03	10 MIN	04	15 MIN	05	25 MIN	06	30 MIN	07	35 MIN	08	15 MIN
01	03 MIN																
02	05 MIN																
03	10 MIN																
04	15 MIN																
05	25 MIN																
06	30 MIN																
07	35 MIN																
08	15 MIN																
09 WAIT TO START DELAY	<table border="1"> <tr><td>01</td><td>02 SEC</td></tr> <tr><td>02</td><td>05 SEC</td></tr> <tr><td>03</td><td>08 SEC</td></tr> <tr><td>04</td><td>10 SEC</td></tr> <tr><td>05</td><td>15 SEC</td></tr> <tr><td>06</td><td>20 SEC</td></tr> <tr><td>07</td><td>25 SEC</td></tr> <tr><td>08</td><td>30 SEC</td></tr> </table>	01	02 SEC	02	05 SEC	03	08 SEC	04	10 SEC	05	15 SEC	06	20 SEC	07	25 SEC	08	30 SEC
01	02 SEC																
02	05 SEC																
03	08 SEC																
04	10 SEC																
05	15 SEC																
06	20 SEC																
07	25 SEC																
08	30 SEC																
10-15 N/A	<table border="1"> <tr><td>01</td><td>N/A</td></tr> </table>	01	N/A														
01	N/A																
02-07 Technical Support only	01 N/A	01 N/A															


*Vehicle will shutdown when a door is opened.

REMOTE STARTER ERROR CODES: NOTES	[X] NUMBER OF PARKING LIGHT FLASHES	DIAGNOSTIC
I WARNING: The following applies only when the parking lights are connected and supported by the system.	01	Engine running.
	02	Key in ignition at ON position.
II After a remote starter failure, the parking lights will flash three [3x] times, then will flash [X] number times to indicate an error code. See table.	03	N/A
	04	Trunk is open.
	05	Foot brake is ON.
	06	Hood is open.
	07	N/A
	08	Tach failure.
	09	N/A
	10	System is in Valet Mode.
	11	CAN communication failure
	12	RS not synchronized. Start vehicle with OEM key for 15 sec before trying a new RS sequence.


REMOTE STARTER SHUTDOWN ERROR CODES: NOTES	[Y] NUMBER OF PARKING LIGHT FLASHES	DIAGNOSTIC
I WARNING: The following applies only when the parking lights are connected and supported by the system.	01	Engine tach signal is lost.
	02	N/A
II If the engine shuts down after a remote starter sequence: Press and hold the Trunk button and the Start button at the same time for 2.5 seconds when using a 1-WAY remote. OR Press once [1x] on button "4" when using a 2-WAY remote. The parking lights will flash four [4x] times, then will flash [Y] number times to indicate an error code. See table.	03	Foot brake is ON.
	04	Hood is open.
	05	Engine RPM limiter is ON.
	06	Glow plug timeout error.
	07	Vehicle is moving (VSS).
	08	Check engine warning light is ON.
	09	Low fuel warning light is ON.
	10	N/A
	11	CAN communication failure during RS sequence.

TEST MODULE		LED 1 STATUS	DIAGNOSTIC
I	DURING PROGRAMMING	Flashing RED	Missing/wrong information from firmware or vehicle.
		Solid RED	Module waiting for more vehicle information.
		Flashing GREEN	Additional steps required to complete module programming.
		Solid GREEN then OFF	Module correctly programmed.
		OFF	No activity or module already programmed.
II	DURING REMOTE START	Flashing RED	Module incorrectly programmed.
		Solid RED	Module incorrectly programmed.
		Flashing GREEN	Module correctly programmed and operational.
		Solid GREEN then OFF	Reset in progress.
		OFF	Invalid ground when running status from remote starter.
III	WITH IGNITION OFF	Flashing RED	Module incorrectly programmed or connected.
		Solid RED	Module not programmed. Waiting for more vehicle information.
		Flashing GREEN	False ground when running status from remote starter.
		Solid GREEN then OFF	Reset in progress.
		OFF	Module at rest and ready for a remote start sequence.

01 Disconnect all connectors from module except the BLACK 20-PIN connector.

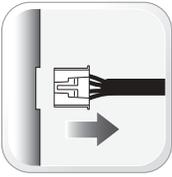

02 Disconnect the BLACK 20-PIN connector.

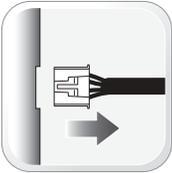

03 PRESS AND HOLD the module's programming button while connecting the BLACK 20-PIN connector.



04 Wait, LED 1 will flash RED. RELEASE programming button.




05 LED 1 will turn RED for 2 seconds.



06 Module RESET completed.



07 Reconnect all connectors.

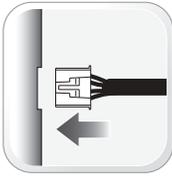

08 Repeat programming procedure.



>> Failure to follow procedure may result with a DTC or a CHECK ENGINE error message.



>>



All vehicle doors must be closed and locked prior to remote start sequence.

01



Time restriction. Complete steps 2 to 5 within 45 seconds.

02



Unlock driver door.

03



Open driver door and enter vehicle.

04



Close driver door.

05



Press and release BRAKE pedal.

06



Take over procedure completed.

>>



Failure to follow procedure will result in vehicle engine shutdown.

CHECKLIST	
01	WARNING: Vehicle engine will start many times. Test in a well ventilated area.
02	Open driver door window for easy vehicle access.
03	Close all vehicle doors, hood and trunk.
04	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	QUESTION 1: Does the vehicle remote start?
<input type="checkbox"/>	YES: Go to step 5.
<input type="checkbox"/>	NO: The module doesn't detect OEM remote lock button from the vehicle communication network. Check all connection, repeat step 4 and call technical support if the problem persist.
05	Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle.
	QUESTION 2: Does the vehicle shut down?
<input type="checkbox"/>	YES: Go to step 6.
<input type="checkbox"/>	NO: Repeat step 5. If problem persists, push vehicle start button once [1x] to shut down the vehicle and call technical support.
06	Unlock and open driver door.
07	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	QUESTION 3: Does the vehicle remote start?
<input type="checkbox"/>	YES: The module does NOT detect the door signal from the vehicle communication network. Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle and call technical support.
<input type="checkbox"/>	NO: Go to step 8.
08	Open hood.
	QUESTION 4: Is the orange warning sticker "Sticker 1" placed under the hood?
<input type="checkbox"/>	YES: Leave hood open and go to step 9.
<input type="checkbox"/>	NO: Put the mandatory orange warning sticker "Sticker 1", leave hood open and go to step 9.
09	Close all doors.
10	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	QUESTION 5: Does the vehicle remote start?
<input type="checkbox"/>	YES: Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle. Go to Question 6.
<input type="checkbox"/>	NO: Go to step 11.
	QUESTION 6: Is the vehicle equipped with a factory hood switch? (Inside hood latch)
<input type="checkbox"/>	YES: The module does NOT detect the hood signal from the vehicle communication network. Call technical support.
<input type="checkbox"/>	NO: Install the mandatory hood switch included in the kit. Repeat installation checklist.
11	Close hood.
12	Enter vehicle. Do NOT press brake pedal.
13	Close all doors.
14	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
15	Wait for the vehicle to start.
16	Press brake pedal.
	QUESTION 7: Does the vehicle shut down?
<input type="checkbox"/>	YES: Go to step 17.
<input type="checkbox"/>	NO: The module does NOT detect the brake pedal signal from the vehicle communication network. Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle and call technical support.
17	Apply parking brake.
18	Exit vehicle.

CHECKLIST	
19	Close all doors.
20	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
21	Wait for the vehicle to start.
	QUESTION 8: Is the vehicle equipped with Comfort Access System ?
<input type="checkbox"/>	YES: For 1, 5, 6, X5, X6: Touch exterior driver door handle to unlock door using Comfort Access System. Within 45 seconds, go to step 22. YES: For 3, X1, Z4, Mini: Press UNLOCK button once [1x] on the OEM keyfob. Within 45 seconds, go to step 22.
<input type="checkbox"/>	NO: Press UNLOCK button once [1x] on the OEM keyfob. Within 45 seconds, go to step 22.
22	Open driver door.
	QUESTION 9: Does the vehicle shut down?
<input type="checkbox"/>	YES: For Z4, X5, X6: Go to step 25. YES: For 1, 3, 5, 6, X1: The module does NOT detect the parking brake signal or the unlock signal from the vehicle communication network. Call technical support.
<input type="checkbox"/>	NO: For Z4, X5, X6: The module does NOT detect the parking brake signal correctly from the vehicle communication network. Call technical support. NO: For 1, 3, 5, 6, X1: Go to step 23.
23	Press and release brake pedal.
24	Push vehicle start button once [1x] to shut down the vehicle.
25	Installation checklist completed.